

## CABINET CODY 2DO

# <u>zui</u>ver°




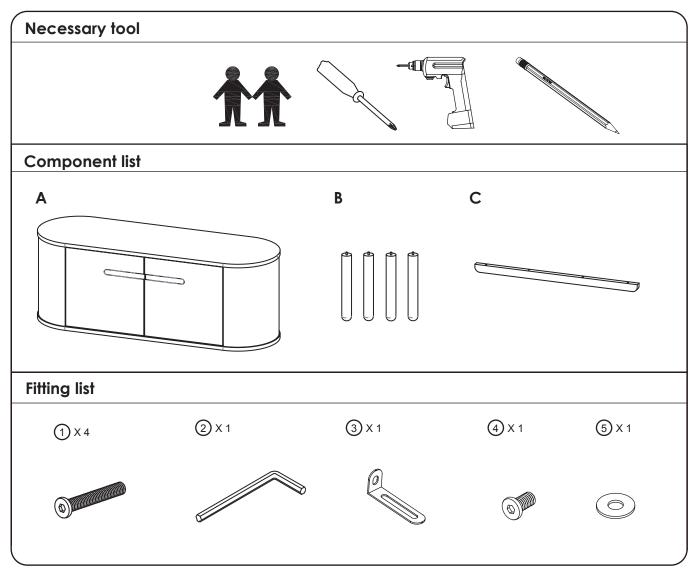


#### STEP 1

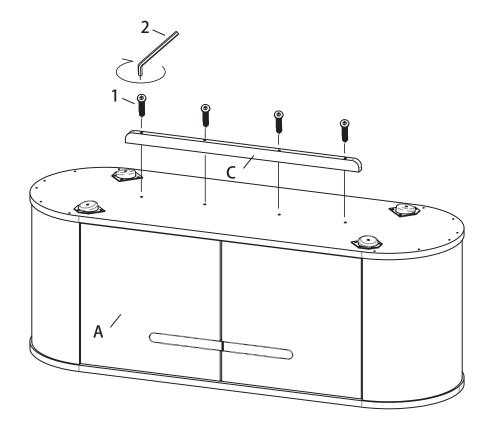


STEP 2

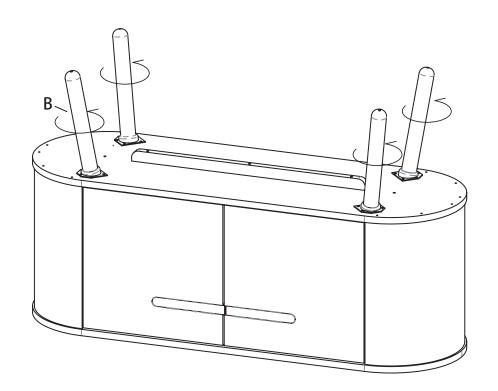

### STEP 3

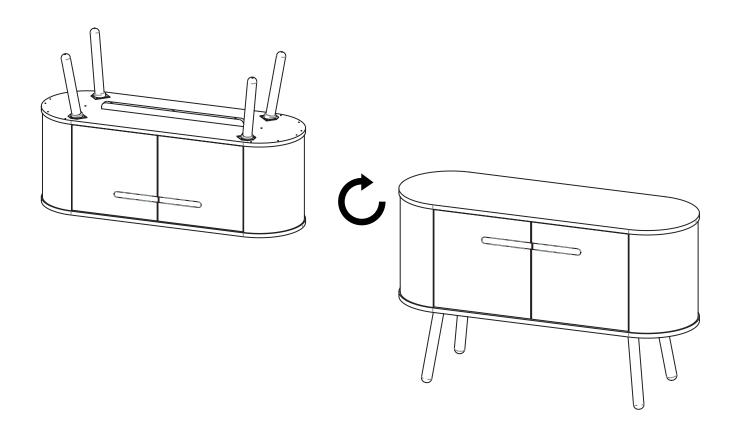


STEP 4

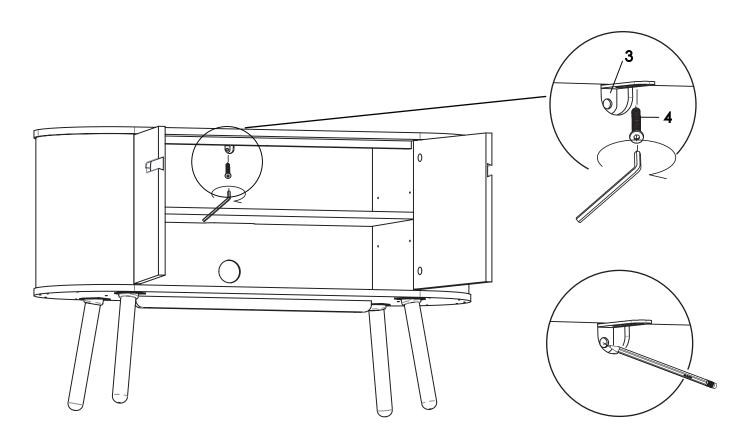

#### Wall fixing - if in doubt seek professional advice


Please ensure to use the correct size rawl plug when installing the metal bracket to a wall. If your wall is cavity construction or wood you may need to seek appropriate wall fixings.



Wood
If fixing to wood make sure
that it isn't chipboard as
screws can easily pull away
from the core structure



Brick or Masonry Use an appropriate wall plug provided you are sure your



Cavity wall
Special toggle wall
plugs are needed.
Seek expert advice

#### STEP 5

