


Assembly Instruction



7100010 COAT RACK FLAVI

STEP1

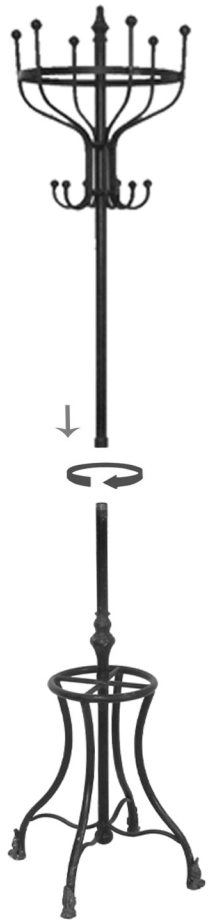

STEP2



A:1PC



B:1PC